




# Kodak EasyShare LS743 Top and menu button replacement

Replace top button.

Written By: Michael

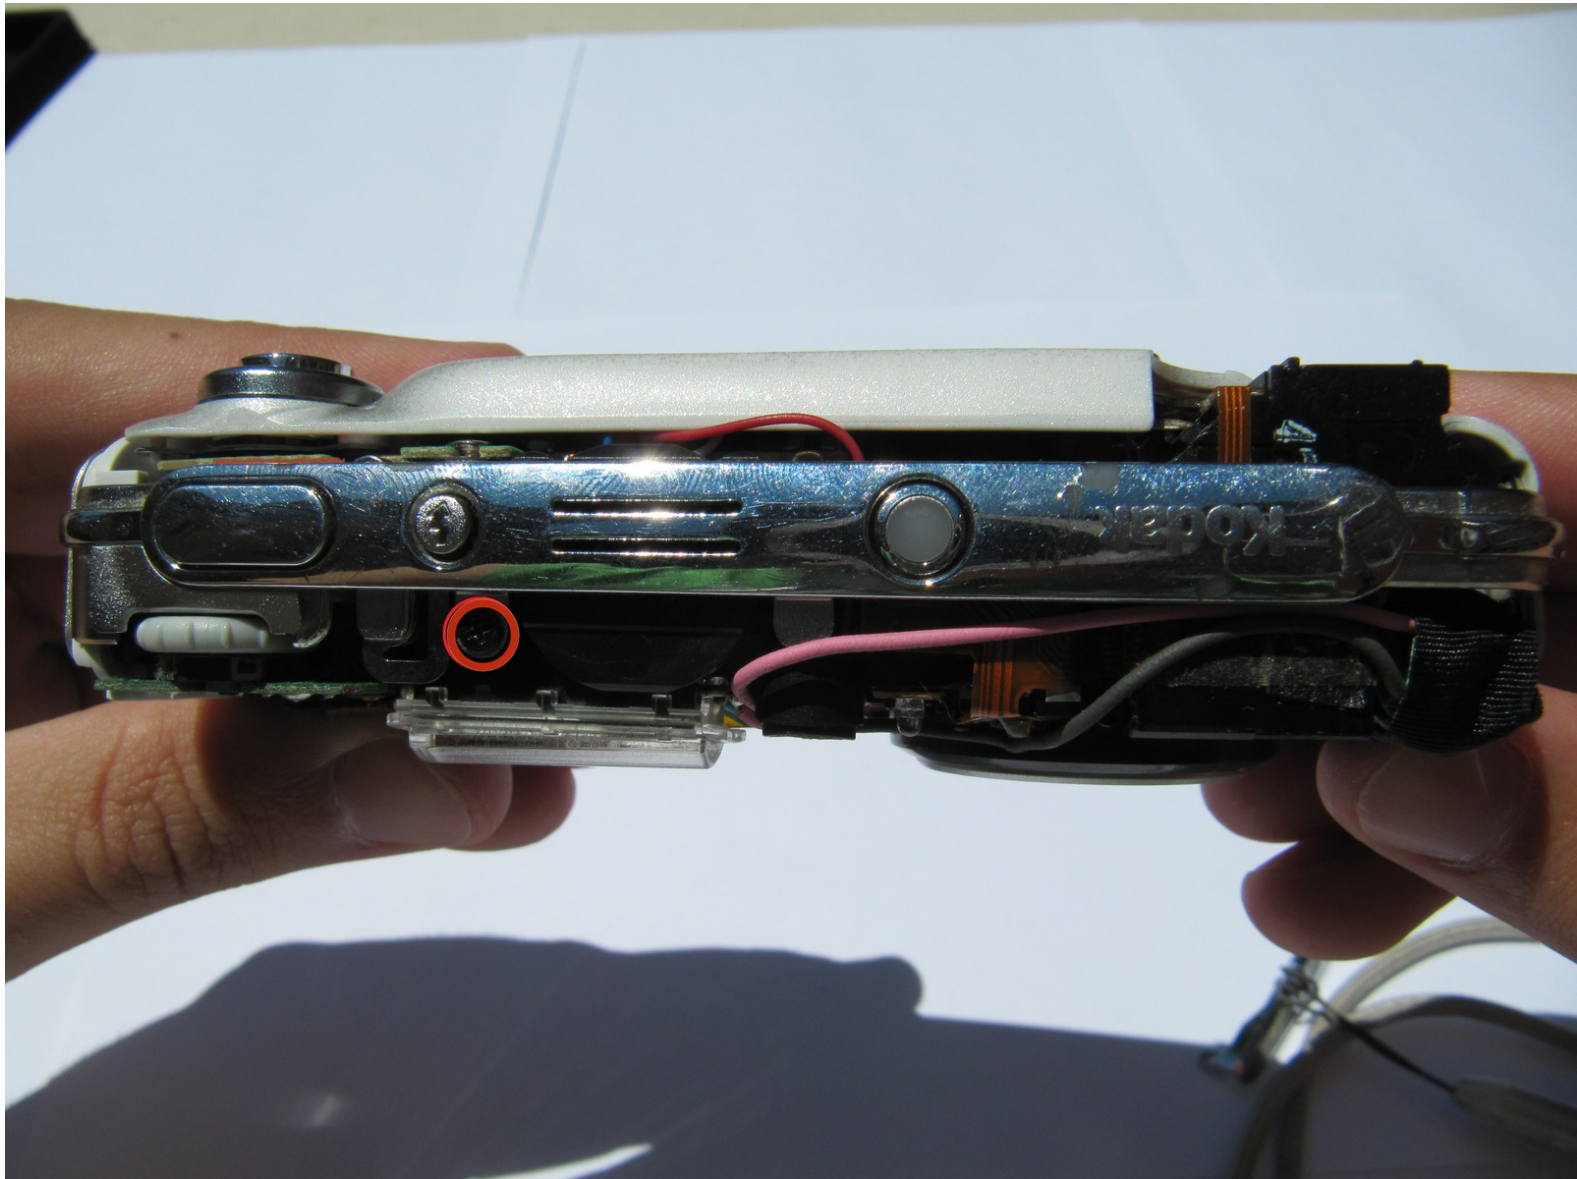

## INTRODUCTION

Replace unusable or damaged button.

---



### TOOLS:


- [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — Battery



- Open the battery cover.

## Step 2

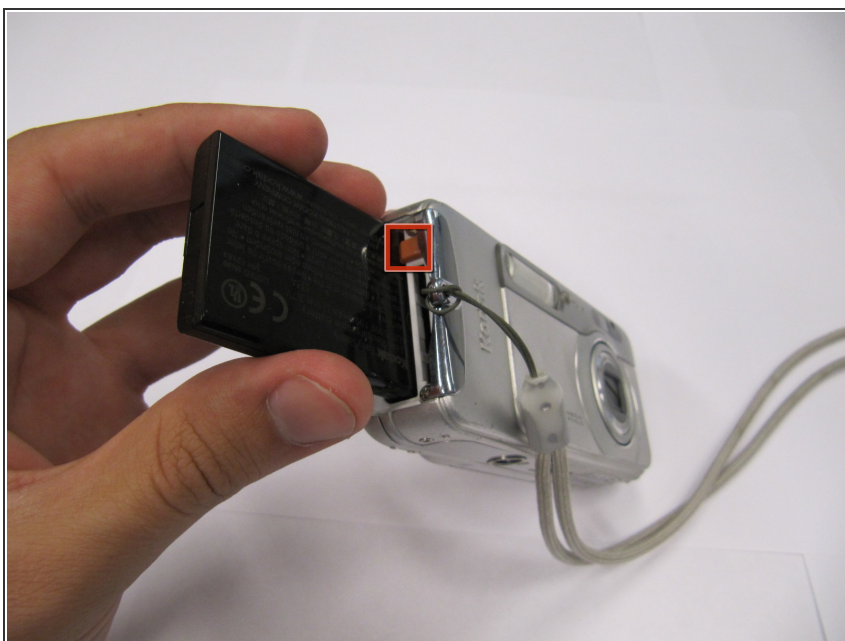

- Slide the orange latch sideways to eject the battery.
- Remove the battery.




### Step 3 — Kodak EasyShare LS743 Camera Case Disassembly



- Remove 7 screws.


- 1 (6.25 mm) screw located on the top right corner, next to the view screen.
- 4 (4.45mm) screws on the bottom of the camera.
- 2 (2.95mm) screws on the left side of the camera.

### Step 4

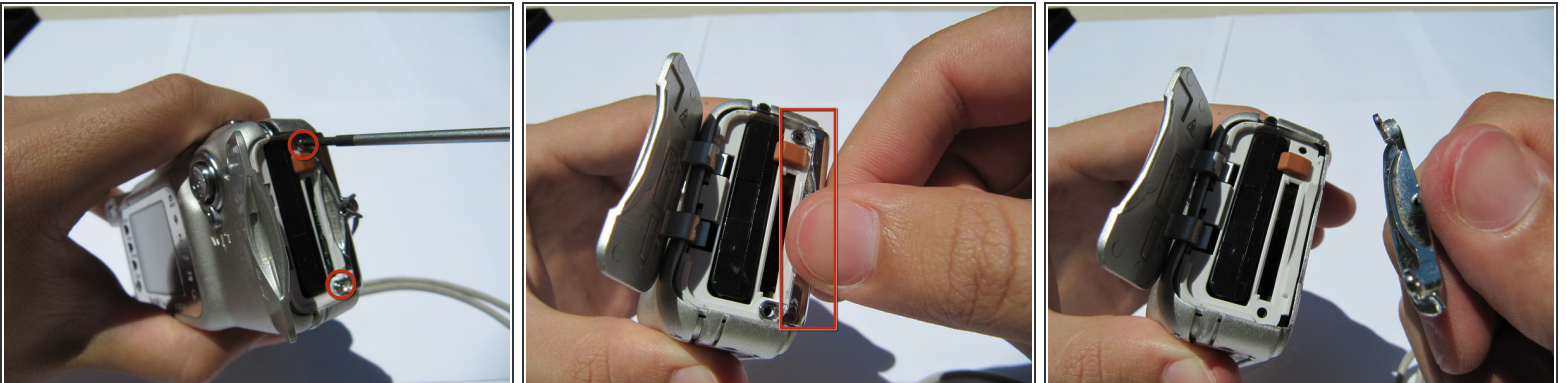


- There will be 2 (5.39mm) screws. Remove the screws in order to remove the lanyard.

## Step 5

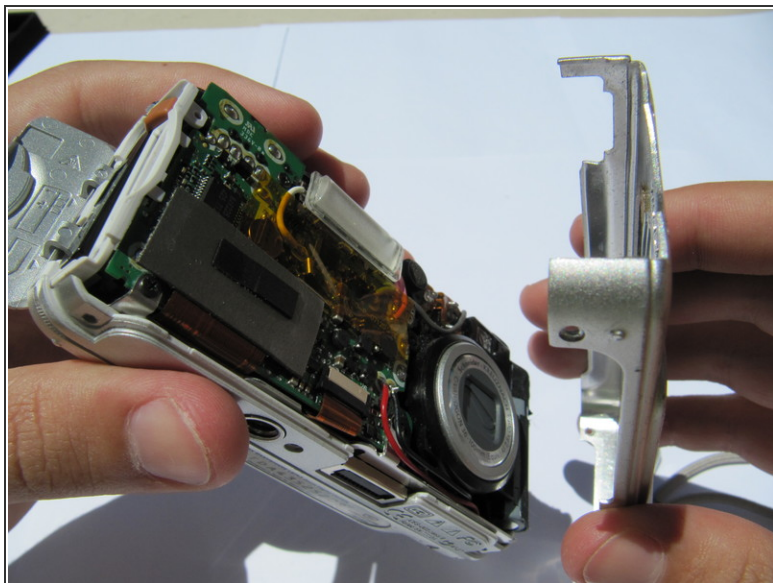

- Remove the rear camera casing.
- Remove the front casing.


## Step 6 — Top and menu buttons

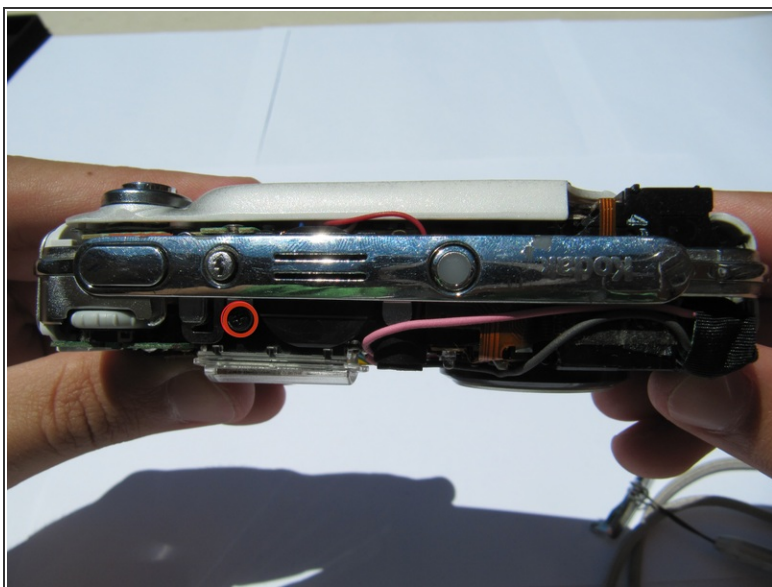

- Remove the top panel screw (1x 4.37mm).



## Step 7

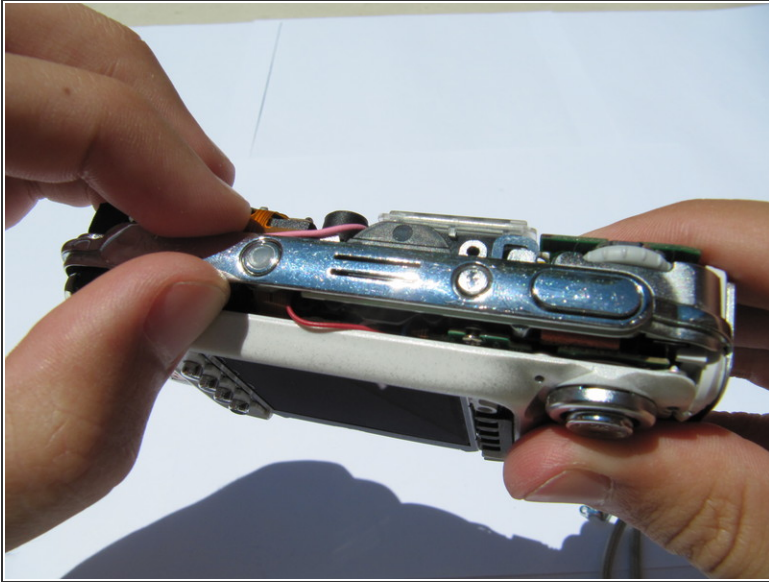



- Remove the top panel.

## Step 8





- Remove the back panel screws (1x 3.33mm, and 1x 3.40mm).

## Step 9

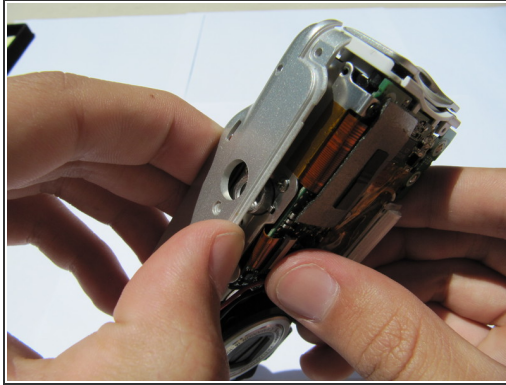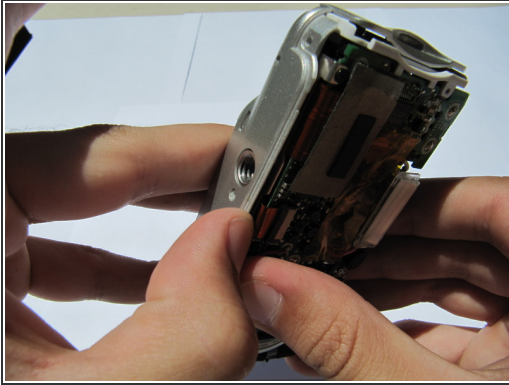

- Separate the inner casing from the tripod mount.



## Step 10

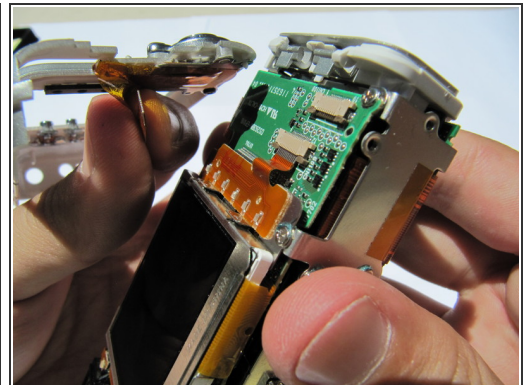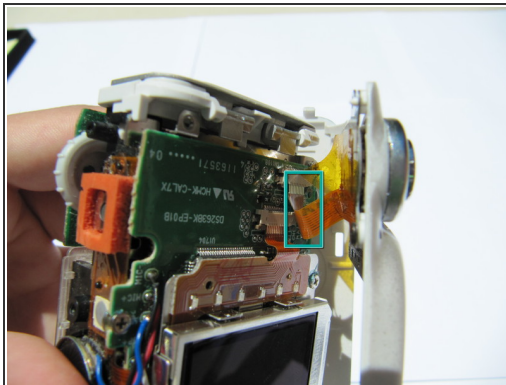

- Gently pull the orange tab out of the circuit board.




## Step 11

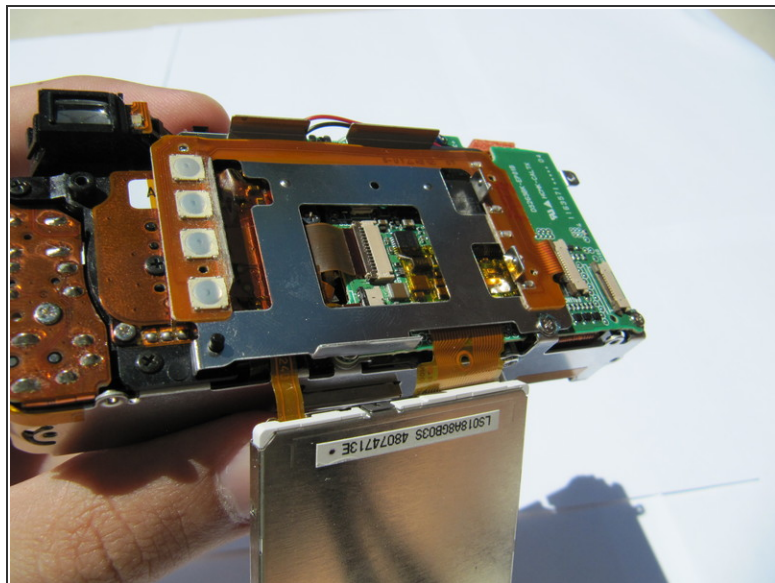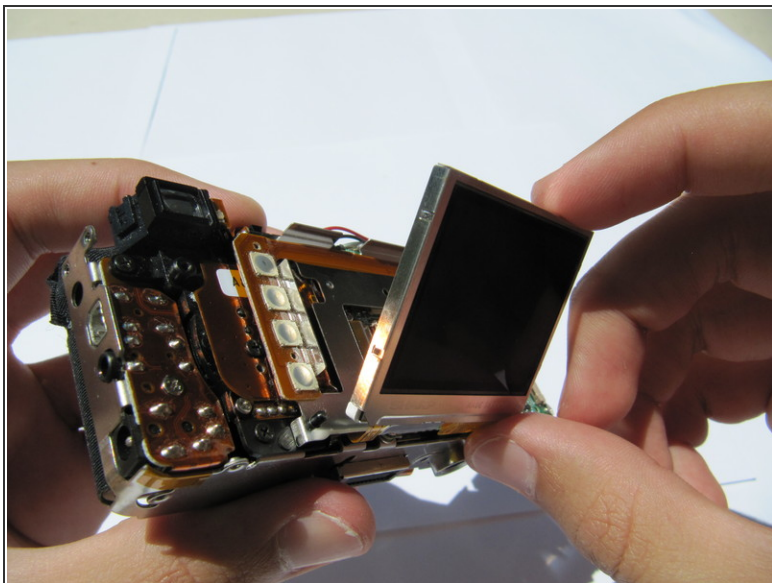

⚠ Carefully flip the LCD panel to expose the central circuit board.



## Step 12

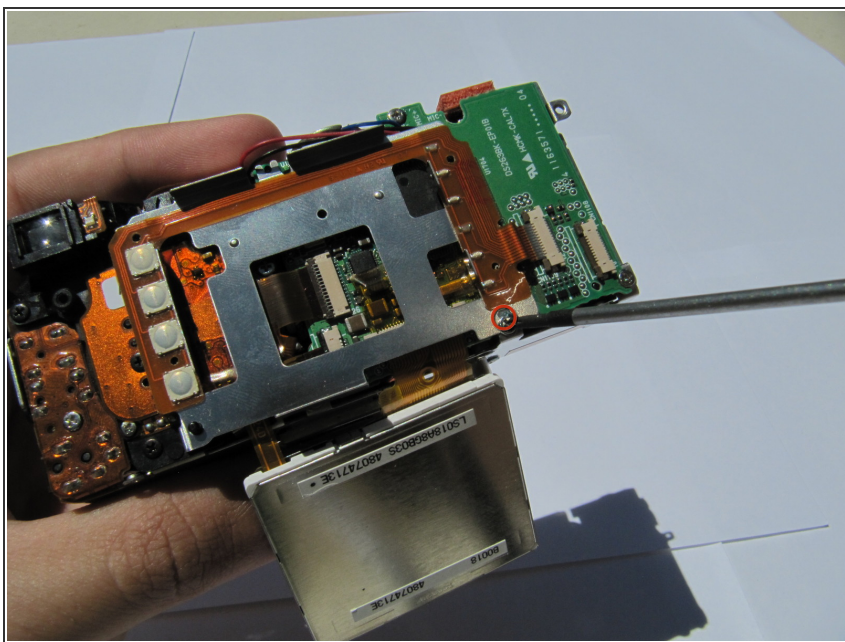

- Remove the (1x 3.33mm) screw from the menu button panel .



## Step 13

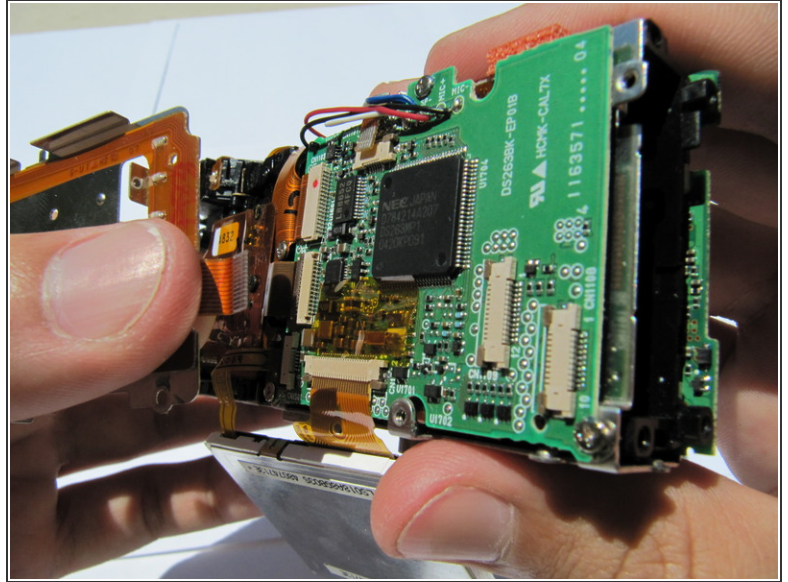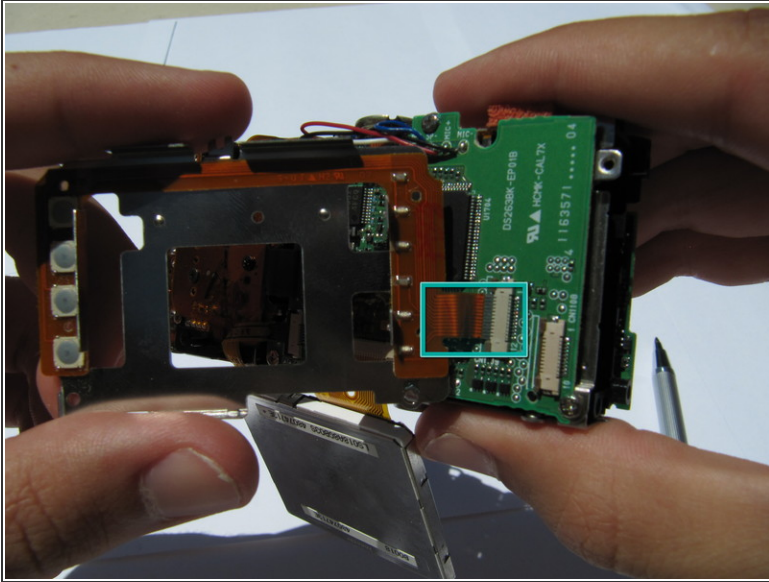

- Pull the second orange tab from the circuit board and remove the buttons.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-21 02:15:04 AM.